



### FAN MODE

**Auto** : Work when there is a request for air conditioning.

- Arrêt** : Not Working  
**Renitialization**
1. Press the enter button in the room
  2. Automatic 16H

### TEMPÉRATURE


The temperature being displayed is the real-time temperature reading of the room in degrees Celsius

When pressing the star button, the set point of the room will be displayed.


When pressing the star button, the set point of the room will be displayed.

### TEMPERATURE SETPOINT ADJUSTEMENT

### AIR CONDITIONING

 Cooling Mode

FAN CONTROL  
AUTO/OFF.

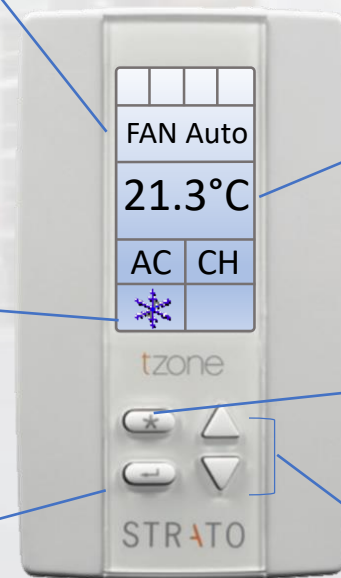



## MODE DU VENTILATEUR

**Auto** : Fonctionne quand il y a une demande de climatisation

**Arrêt** : Ne fonctionne pas

### Réarmement :

1. Dans la chambre appuyer sur enter
2. Automatique 21h

## TEMPÉRATURE


La température affichée est la température actuelle de la pièce en degré Celsius.

En appuyant sur l'étoile vous allez voir la consigne de la pièce

En appuyant sur l'étoile vous allez voir la consigne de la pièce

## CONTRÔLE DE LA TEMPÉRATURE

## CLIMATISATION



MODE CLIM

CONTRÔLE DU VENTILATEUR EN MODE AUTO/ARRÊT.

